


# 8-Channel Relay Output Board Via I<sup>2</sup>C Protocol

P/N KA-I2C-8-RELAY

## I2C-Relay8

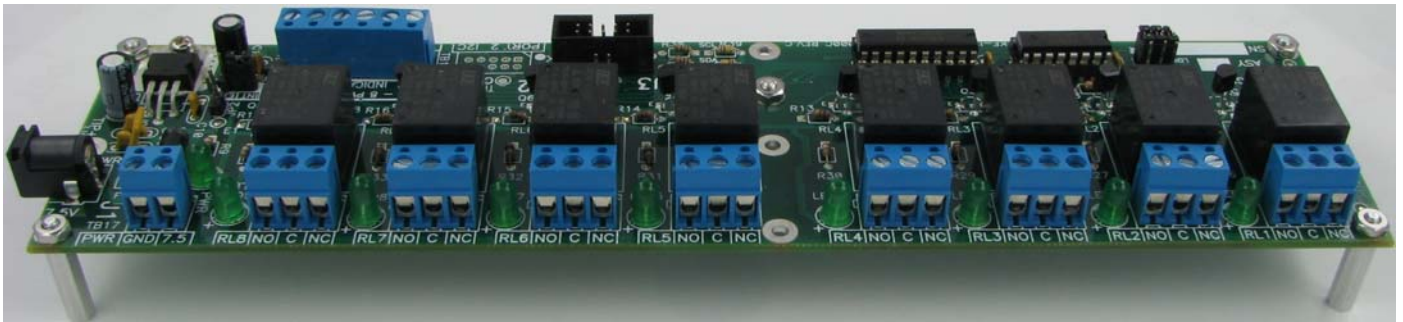

User Manual

# 8-Channel Relay Output Board Via I<sup>2</sup>C Protocol

P/N KA-I2C-8-RELAY

## Table of Contents

What Does it Do? .....	3
What Do I Need to Make it Work?.....	3
What Else Does it Work With? .....	4
How to Use This Device .....	5
Setting Up the Controller .....	5
Powering Up the I2C-Relay8.....	5
Connecting to the I <sup>2</sup> C Communications Port.....	6
IDC connectors J3 and J2 .....	6
Terminal Blocks TB18-TB20.....	6
Setting the I <sup>2</sup> C Address .....	7
Using the I2C-Relay8 .....	7
Illustrations .....	9
Technical Specifications.....	14
Disclaimers.....	15

# 8-Channel Relay Output Board Via I<sup>2</sup>C Protocol

P/N KA-I2C-8-RELAY

## What Does it Do?

The I2C-Relay8 is designed to generate digital output to up to 8 independent sources. It uses Power Relays to create this output.

Each output port on the I2C-Relay8 has an LED indicator light which activates when the port is activated. Additionally, the I2C-Relay8 can report the state of a port to a PC or other external device via the on-board I<sup>2</sup>C communications port.

The I2C-Relay8 is modular and expandable; in addition to being stackable, it can be assigned 1 of up to 8 unique addresses and monitored via the on-board I<sup>2</sup>C communications port.

## What Do I Need to Make it Work?

You will need:

- Controller module
  - USB-I2C-Relay10
  - USB-I2C-RS232-Micro
  - WEB-I2C-Remote
  - Your own custom I2C controller module
- Power Supply
  - 7.5VDC @ 100mA maximum
  - Can be brought in via on-board terminal block TB17
  - Can be brought in via standard 2.1mm X 5.1mm DIN connector J1

# 8-Channel Relay Output Board Via I<sup>2</sup>C Protocol

P/N KA-I2C-8-RELAY

- Can be brought in via I<sup>2</sup>C port
- 10-pin IDC connector, preferably in the form of a female-female ribbon cable
- 14-22 AWG wire, for connecting ports to output sources, supplying power and I<sup>2</sup>C communications port

## What Else Does it Work With?

The I2C-Relay8, in addition to interfacing with your own custom applications, can be used with a PC running LabView version 7 or later and a USB-I2C-Relay10 control module (see Figure 1).

Simply connect your PC to the control module via USB, connect your I2C-Relay8 module to the controller via the I<sup>2</sup>C module, and from there use our LabView drivers to observe the state of all 8 input ports in real-time on up to 2 I2C-Relay8 modules.

The I2C-Relay8 module can also be used with:

- I2C-Opto8
- USB-I2C-RS232-Micro (stand-alone unit programmed via PC)
- WEB-I2C-Remote (stand-alone server which executes commands via Ethernet connection)

You can also have I2C-Relay8 modules working side-by-side with I2C-Opto8 input modules on the same controller.

# 8-Channel Relay Output Board Via I<sup>2</sup>C Protocol

P/N KA-I2C-8-RELAY

## How to Use This Device

### Setting Up the Controller

Perhaps your preference is for stand-alone operation, or remote accessibility, or a setup which doesn't rely on an Ethernet connection. Whichever controller you choose, there are distinct advantages to each model.

While operation of your controller can be as simple as plugging your controller into your power source and then connecting the I2C-Relay8 to your controller, we strongly encourage you to refer to the setup directions in the documentation for your controller.

### Powering Up the I2C-Relay8

Once your controller is properly powered up and configured, it's time to set up your I2C-Relay8. First you have to decide how you are going to power the module – through the external power, or through the I<sup>2</sup>C port.

It is recommended that if you are going to connect more than two modules to the controller, you should bring power in either through the terminal block TB17 or the DIN connector J1.

Once you have decided how to power your I2C-Relay8, there is a jumper, JP7 that needs to be configured, as illustrated in Figure 4. You need to make sure that it is in the correct position so that the appropriate power source is used, otherwise the unit will not function.

# 8-Channel Relay Output Board Via I<sup>2</sup>C Protocol

P/N KA-I2C-8-RELAY

If the shunt is over the right-hand pin (marked “EXT”), power must either come from the DIN connector, J1, or the terminal block TB17. If the shunt is over the left-hand pin (marked “INT”), power must come from the I2C port

## Connecting to the I<sup>2</sup>C Communications Port

Connecting to the I<sup>2</sup>C communications port on your I2C-Relay8 can be done in one of two ways:

### IDC connectors J3 and J2

These connectors are also known as 10-pin IDC connectors. Generally what you plug into these are female-female ribbon cables which look like the illustration found in Figure 2. The pinout for these connectors is illustrated in Figure 3.

One IDC connector is used as an input connector and one is used as an output connector, so that you can daisy-chain units together.

### Terminal Blocks TB18-TB20

First, you will need to short the pins of JP1 together.

The specific pins you need for I<sup>2</sup>C communications are:

- TB19, “DI”
- TB20, “SK”

# 8-Channel Relay Output Board Via I<sup>2</sup>C Protocol

P/N KA-I2C-8-RELAY

- TB18, “GND”
- TB19, “5V”

The location of JP1 and the above pins are shown in Figure 5. Once you find them, use 22-14AWG wire to their sister pins on the controller and then “daisy-chain” them (connecting one to the next to the next) to any other modules the controller should be talking to.

## Setting the I<sup>2</sup>C Address

Each unit operating on the same I<sup>2</sup>C communications bus must have a unique address. Since the I<sup>2</sup>C address space consists of 3 bits, that means that up to 8 unique devices can share the same I<sup>2</sup>C communications bus.

On the I2C-Relay8, the I<sup>2</sup>C address is configured with three jumpers (1 for each bit of the address). Figure 6 shows you where to find these jumpers.

To set the first bit of the address to “1”, short the “HI” and “ADR” pins of JP3 together. To set the first bit to “0”, short the “LO” and “ADR” pins of JP3 together. Repeat with JP4 and JP5 to set the second and third bits of the address.

## Using the I2C-Relay8

Once your I2C-Relay8 is connected to your controller and the unit’s address is configured, how exactly you actually use the product will rely heavily on the controller interface.

If you are not using one of our controller units, your controller must write 2 bytes of information onto the I2C bus each time you wish to change the state of 1 or more channels – a byte for the address of the board you want to talk to, and a byte that

# 8-Channel Relay Output Board Via I<sup>2</sup>C Protocol

P/N KA-I2C-8-RELAY

represents which relays should be engaged and which relays should be disengaged.

## Address Byte

Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
0	1	1	1	X	X	X	0
				A2 (JP5)	A1 (JP4)	A0 (JP3)	R/W

## Status Byte

Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
X	X	X	X	X	X	X	X
RL8	RL7	RL6	RL5	RL4	RL3	RL2	RL1

So, writing “011100010” for the address byte and “00001111” for the status byte means that the unit at address 1 will turn relays RL1-4 on and relays RL5-RL8 off.


Please refer to the PCF8574a datasheet for more detailed information.



# 8-Channel Relay Output Board Via I<sup>2</sup>C Protocol

P/N KA-I2C-8-RELAY

## Illustrations

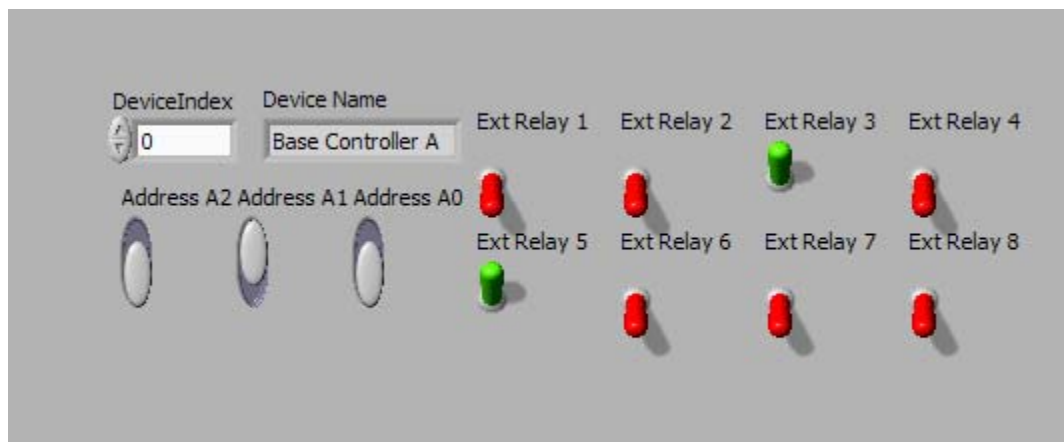

*Figure 1: Screen view of LabView interacting with the I2C-Relay8.*

# 8-Channel Relay Output Board Via I<sup>2</sup>C Protocol

P/N KA-I2C-8-RELAY



Figure 2: IDC Female-Female Ribbon Cable



Front Notch  
Top-Down View

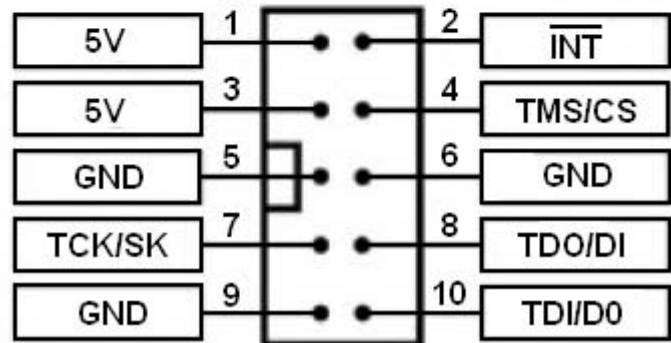


Figure 3: IDC Connector Pinout

# 8-Channel Relay Output Board Via I<sup>2</sup>C Protocol

P/N KA-I2C-8-RELAY



Figure 4: Power Jumper JP7. “INT” means power from the I2C port, “EXT” means power from the DIN connector J1 or terminal block TB17.

# 8-Channel Relay Output Board Via I<sup>2</sup>C Protocol

P/N KA-I2C-8-RELAY

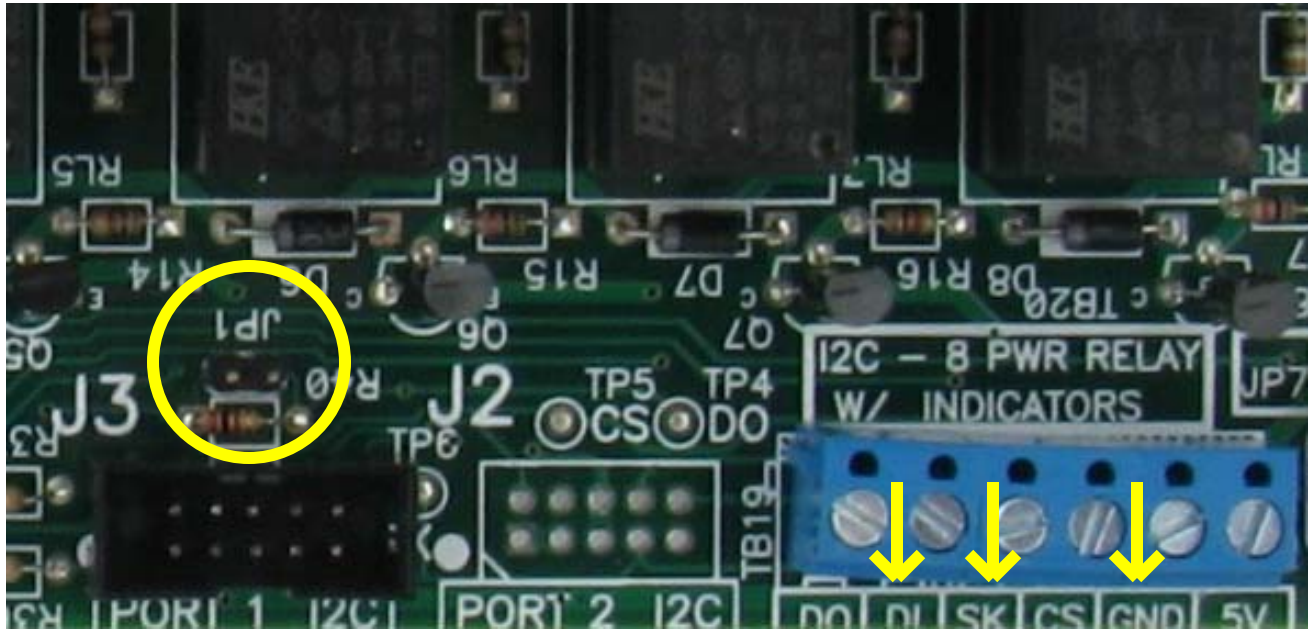


Figure 5: I2C Jumper JP1, and the terminal block pins needed for I2C communications.

# 8-Channel Relay Output Board Via I<sup>2</sup>C Protocol

P/N KA-I2C-8-RELAY

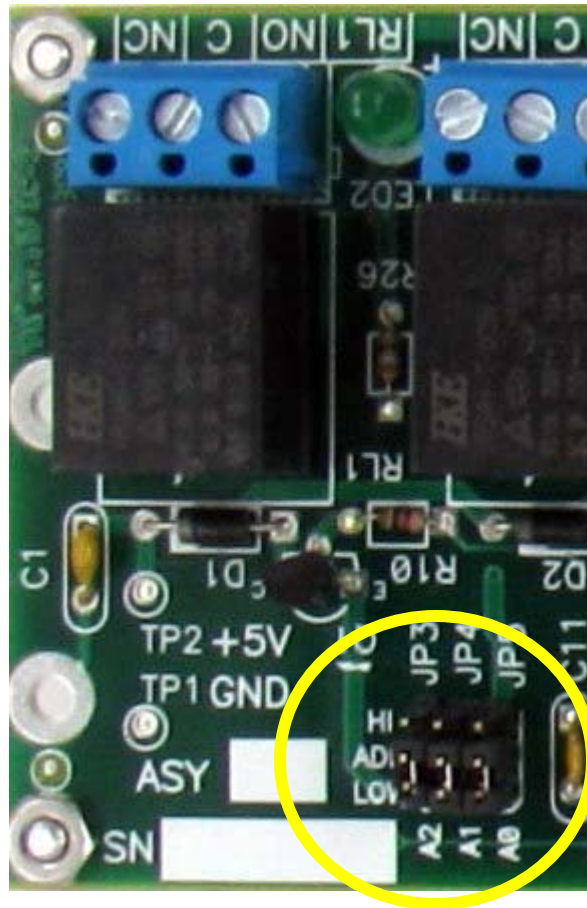


Figure 6: I2C Address Jumpers JP3-JP5.

# 8-Channel Relay Output Board Via I<sup>2</sup>C Protocol

P/N KA-I2C-8-RELAY

## Technical Specifications

Number of Output Ports	8
Arrangement	Form A, SPST
Contact Materials	Optically isolated
Input Port Voltage	5VDC, 5mA minimum
Maximum Switching	100 Hz
Max. allowable Voltage	12VDC
Max allowable current	12mA
Operating humidity	10-80% RH non-condensing
Ambient Temperature	0 to 60 C (with no icing)
Unit Weight	About 120 grams (4.3oz)
Form Factor	64 mm W x 252 mm L (2.5" X 9.9")
Total Power Consumption	7.5VDC @ 100mA max.
Short-Circuit Protection	1.5A with resettable PTC fuse
Power Indicator	Green LED

# 8-Channel Relay Output Board Via I<sup>2</sup>C Protocol

P/N KA-I2C-8-RELAY

## **Disclaimers**

THIS PRODUCT IS PROVIDED "AS-IS," "AS AVAILABLE," AND ALL WARRANTIES, EXPRESS OR IMPLIED, ARE DISCLAIMED (INCLUDING BUT NOT LIMITED TO THE DISCLAIMER OF ANY IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE). THE SOLE AND ENTIRE MAXIMUM LIABILITY OF CADX SERVICES, INC., FOR ANY REASON, AND BUYER'S SOLE AND EXCLUSIVE REMEDY FOR ANY CAUSE WHATSOEVER, SHALL BE LIMITED TO THE AMOUNT PAID BY THE CUSTOMER FOR THE PARTICULAR ITEMS PURCHASED. CADX SERVICES, INC. AND ANY OF ITS AFFILIATES, DEALERS OR SUPPLIERS ARE NOT LIABLE FOR ANY INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES (INCLUDING DAMAGES FOR LOSS OF BUSINESS, LOSS OF PROFITS, LITIGATION, OR THE LIKE), WHETHER BASED ON BREACH OF CONTRACT, BREACH OF WARRANTY, TORT (INCLUDING NEGLIGENCE), PRODUCT LIABILITY OR OTHERWISE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. THE LIMITATIONS OF DAMAGES SET FORTH ABOVE ARE FUNDAMENTAL ELEMENTS OF THE BASIS OF THE BARGAIN BETWEEN CADX SERVICES, INC. AND BUYER. THIS PRODUCT WOULD NOT BE PROVIDED WITHOUT SUCH LIMITATIONS. SOME STATE STATUTES MAY APPLY REGARDING LIMITATION OF LIABILITY.